


Liner Installation Info

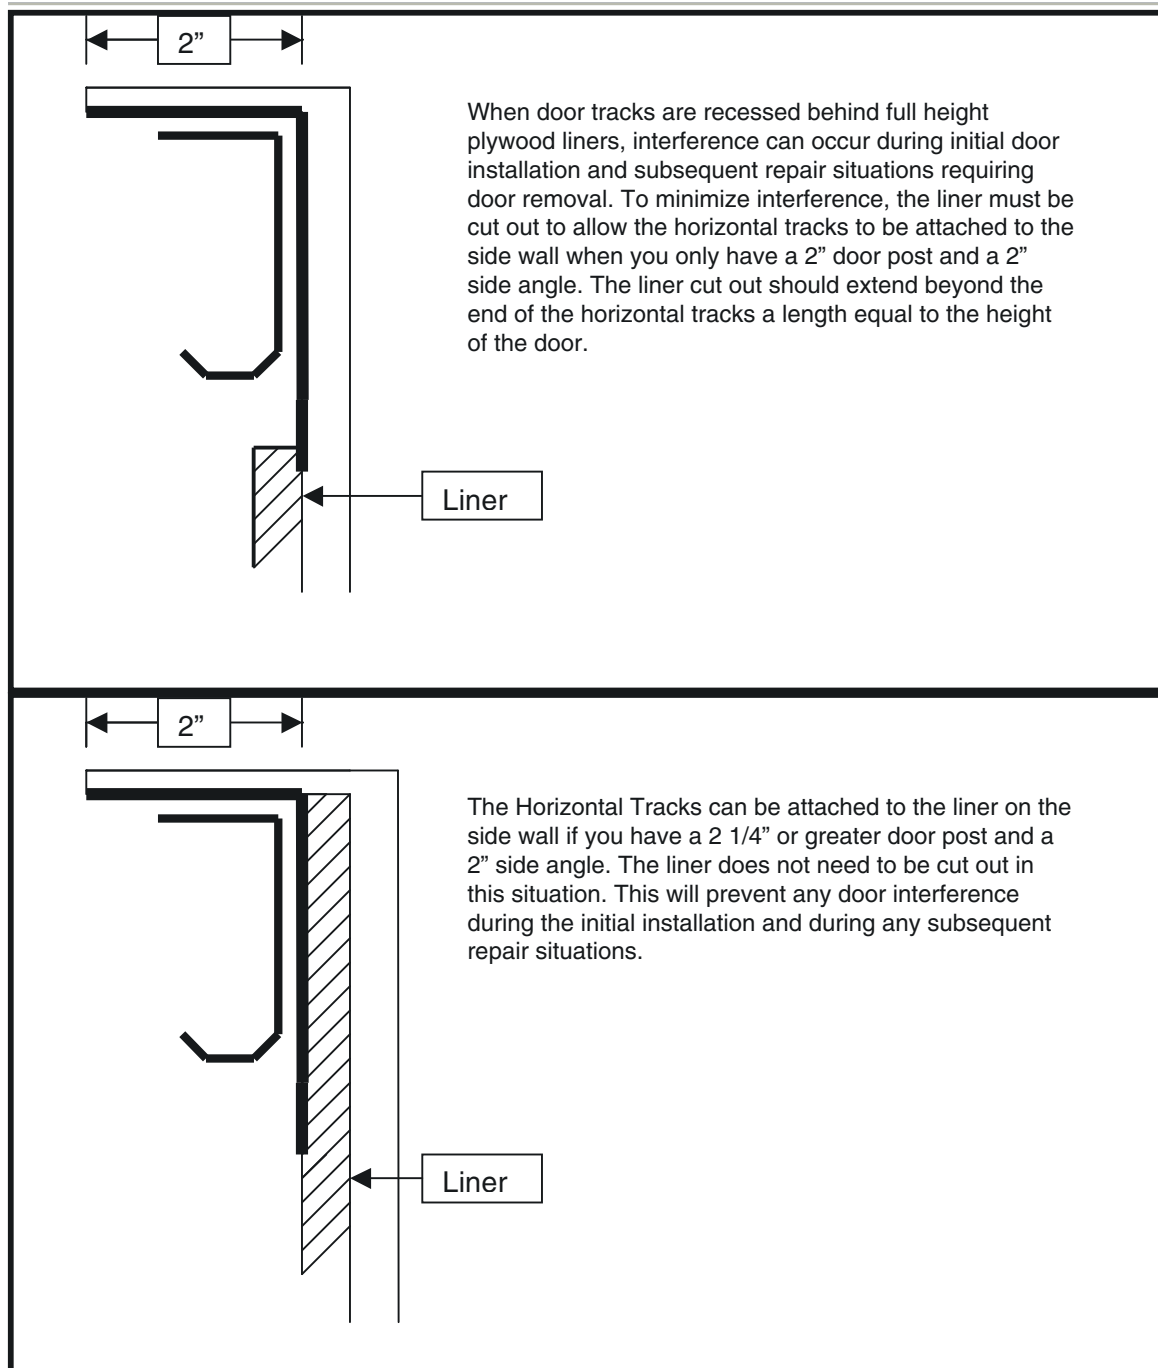

When door tracks are recessed behind full height plywood liners, interference can occur during initial door installation and subsequent repair situations requiring door removal. To minimize interference, the liner must be cut out to allow the horizontal tracks to be attached to the side wall when you only have a 2" door post and a 2" side angle. The liner cut out should extend beyond the end of the horizontal tracks a length equal to the height of the door.

The Horizontal Tracks can be attached to the liner on the side wall if you have a 2 1/4" or greater door post and a 2" side angle. The liner does not need to be cut out in this situation. This will prevent any door interference during the initial installation and during any subsequent repair situations.

- NOTE:
- 1) Our standard angle size is 2.25". If you need 2" angle, then you need to specify it on your order.
 - 2) We will work with customer engineers to prevent interference from liners during door installation and removal. Call McLaren Doors at 1-877-263-9153 for assistance.