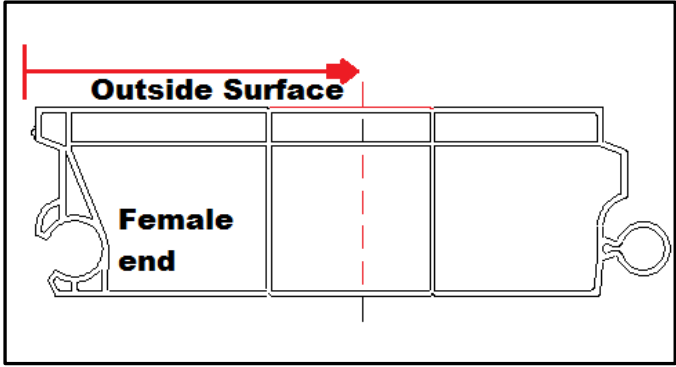



# DRY FREIGHT

## Top Panel Instructions

Parts List	Qty.	Required Tools	Qty.
Panel (with reinforcement)	1	Skill saw with carbide blade	1
Panel (non reinforced)	1	Drill with 1/4" nut driver	1
Top seal (cap seal)	1	Riveting tool with 1/8" head adapter	1
<b>Hardware</b>	<b>Qty.</b>	Pencil	1
S.S. hex head self tapping screw	10	measuring tape	10
Aluminum "C" channel	4	Hammer	4
S.S. Stud plates	2	1/4" Drill bit	1
1/4 x .5" SS rivets	8		

<p><b>Step 1</b></p> <p>Cut the top panel according to the required height by measure the outside female edge of the panel of the panel and drawing a straight line across the outside length.</p>	
--	--


**Step 2**  
Cut the height of the panel using the skill saw and following the

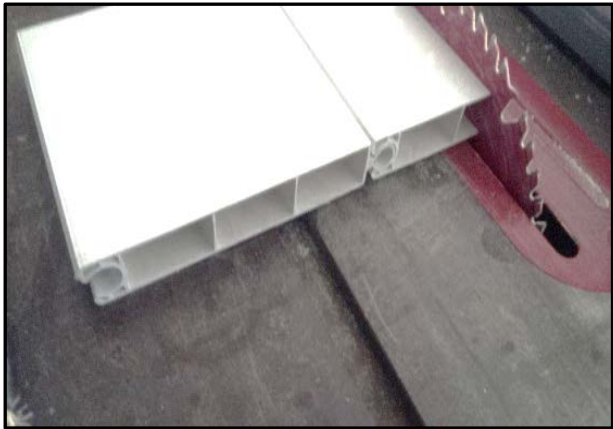

**Step 3**  
Slid the top cap seal over the cut edge of the panel with the black flex seal facing out.




**Step 4**  
Attach the seal on the inside of the panel using the S.S hex head screws found in the hardware bag

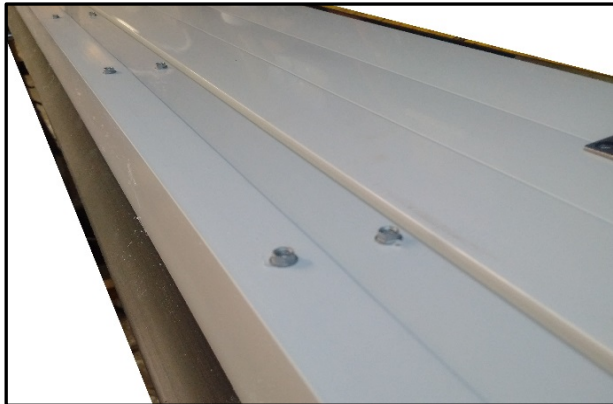

**Step 5**


Insert two "C" Channels into the first 2 uncut pvc chambers under the top seal. Repeat on alternate. A hammer must be used to insert the channels on the insulated models

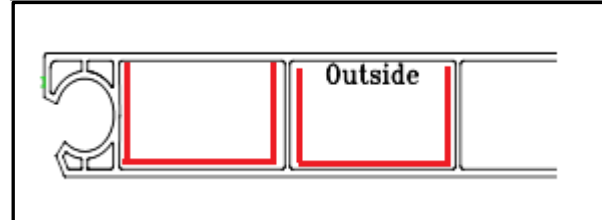

*\*\*Check to make sure that the flat opening of the "C" channels faces the outside of the panel*



**Step 6**

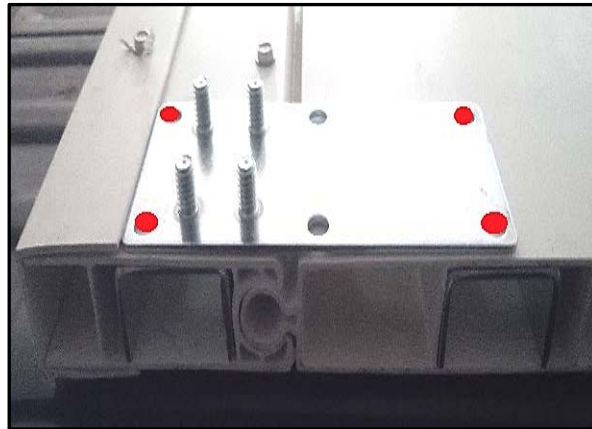Place the stud plate against the leg of seal at the ends of the panel and drill out four holes using the 1/4" drill bit. **The holes must line up with the metal "C" channels**



<p><b>Step 7</b> Write or attach the serial number underneath the serial number label for future identification.</p>	<div data-bbox="808 233 1240 663" data-label="Image">A rectangular label with a black border containing the following text:<p><b>MCLAREN DOORS Serial No.</b></p><p>For technical support, call 1-877-263-9153 or visit <a href="http://www.mclarendoors.com">www.mclarendoors.com</a></p><p><b>Caution:</b> Use proper lifting techniques when opening and closing the door. Do not stand under the door during operation. Inspect door prior to use, if damaged, discontinue use until repaired. Do not hang from the door or door hardware. Contact technical support if the door is not operating correctly and prior to putting on decals for best results. Door should not be put in paint oven. Do not exceed temperature rating of 165F. If this label becomes damaged, replace immediately before operating.</p><p><b>Maintenance:</b> To ensure easier repairs, make sure to grease the counterbalance regularly. If door becomes heavy to lift, counterbalance may require adjustment. Do not grease rollers or track to avoid friction build-up.</p><p>TOGETHER WE ROLL</p></div>
--	---

For assistance contact McLaren Doors technical support at 877-263-9153 or visit our website at [www.mclarendoors.com](http://www.mclarendoors.com)